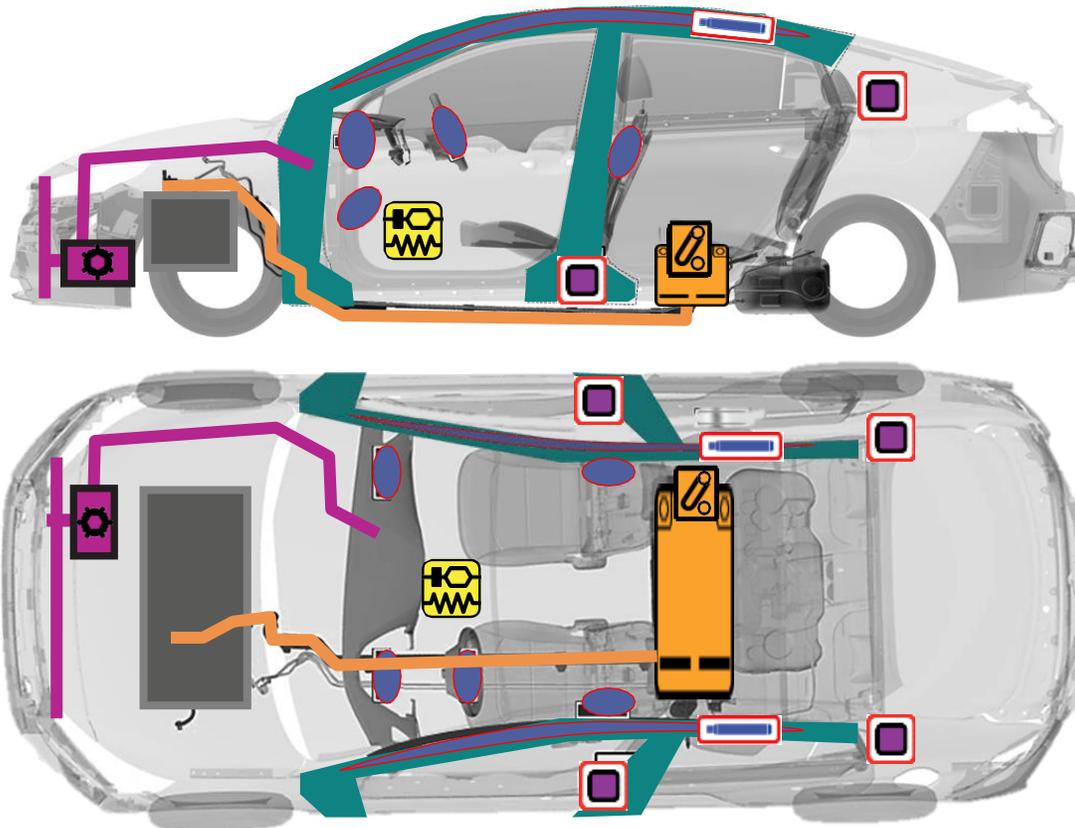


Vehicle Identification/Recognition

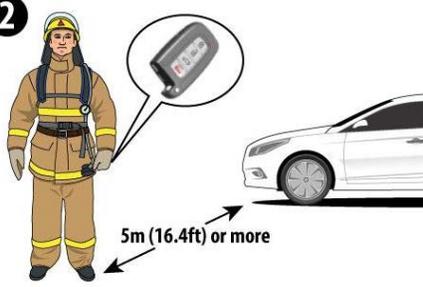


Accessing Vehicle

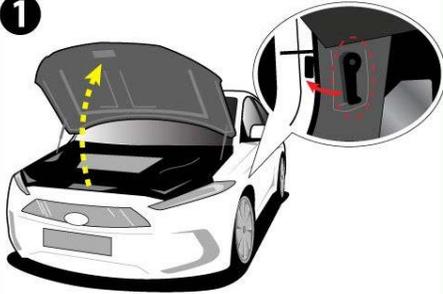
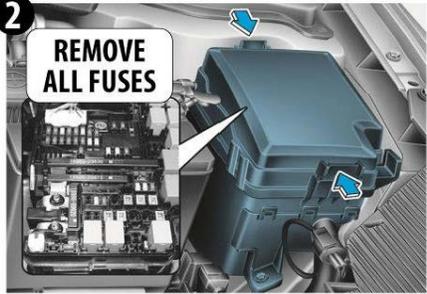


| | | |
|--|--|---|
|  Supplemental Restraint System Control Module (SRSCM) |  Airbag |  Airbag Gas Inflators |
|  High voltage cable |  12V Battery |  Air-conditioning line |
|  High Voltage Disconnect |  OBC (On – Board Charger) |  Ultra-High Strength Steel |
|  High Voltage Battery |  Air-conditioning component |  Seat belt pretensioner |

Disabling Vehicle

| | | |
|---|---|---|
| <p>1</p>  | <p>2</p>  <p>5m (16.4ft) or more</p> | <p>3</p>  <p>FOLD REAR SEAT FORWARD TO ACCESS</p> <p>WAIT 5min.</p> |
|---|---|---|

OR

| | | |
|---|--|---|
| <p>1</p>  | <p>2</p>  <p>REMOVE ALL FUSES</p> | <p>3</p>  <p>FOLD REAR SEAT FORWARD TO ACCESS</p> <p>WAIT 5min.</p> |
|---|--|---|

Towing Information

Tow the vehicle using a flat bed or using wheel dollies. Never tow the vehicle with the front or rear wheels on the ground



For further information, please refer to the Emergency Response Guide (ERG).